

WP08/10/12/15/215

2 Way Professional Passive Speaker Cabinet
INSTRUCTIONS MANUAL



Explanation of Graphical Symbols



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

	CAUTION	VORSICHT	
	BEFORE OPENING PULL MAIN PLUG	VOR DEM OFFNEN NETZSTECKER ZIEHEN	
CAUTION: TO REDUCE THE RISK OF FIRE REPLACE WITH ONLY SAME TYPE AND RATING OF FUSE			
WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICS DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.			

IMPORTANT SAFETY INSTRUCTIONS

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

PRECAUTIONS

PLEASE READ CAREFULLY BEFORE PROCEEDING

Please keep this manual in a safe place for future reference.

WARNING

Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire or other hazards. These precautions include, but are not limited to, the following:

Power supply/Power cord

- Only use the voltage specified as correct for the device. The required voltage is printed on the name plate of the device.
- Use only the included power cord.
- Do not place the power cord near heat sources such as heaters or radiators, do not excessively bend or otherwise damage the cord, place heavy objects on it, or place it in a position where anyone could walk on, trip over, or roll anything over it.

Do not open

- Do not open the device or attempt to disassemble the internal parts or modify them in any way. The device contains no user-serviceable parts. If it should appear to be malfunctioning, discontinue use immediately and have it inspected by qualified service personnel.
- Do not open the device or attempt to disassemble the internal parts or modify them in any way. The device contains no user-serviceable parts. If it should appear to be malfunctioning, discontinue use immediately and have it inspected by qualified service personnel.

Water warning

- Do not expose the device to rain, use it near water or in damp or wet conditions, or place containers on it containing liquids which might spill into any openings.
- Never insert or remove an electric plug with wet hands.

If you notice any abnormality

- If the power cord or plug becomes frayed or damaged, there is a sudden loss of sound during use of the device, or any unusual smells or smoke should appear, turn off the power switch, disconnect the electric plug from the outlet immediately, and have the device inspected by qualified service personnel.
- If this device is dropped or damaged, immediately turn off the power switch, disconnect the electric plug from the outlet, and have the device inspected by qualified service personnel.

⚠ WARNING

Always follow the basic precautions listed below to avoid the possibility of physical injury to you or others, or damage to the device or other property. These precautions include, but are not limited to, the following:

Power supply/Power cord

- Remove the electric plug from the outlet when the device is not to be used for extended periods of time, or during electrical storms.

When removing the electric plug from the device or an outlet, always hold the plug itself and not the cord. Pulling by the cord can damage it.

Location

When transporting or moving the device, always use two or more people. Attempting to lift the device by yourself may damage your back, result in other injury, or cause damage to the device itself.

Before moving the device, remove all connected cables.

When setting up the device, make sure that the AC outlet you are using is easily accessible. If some trouble or malfunction occurs, immediately turn off the power switch and disconnect the plug from the outlet.

Do not use the device in a confined, poorly ventilated location. Make sure that there is adequate space between the mixer and surrounding walls or other devices: at least 1' ft. at the side, 1' ft. behind and 1' ft. above. If the mixer is to be used installed into the speaker cabinet, make sure to allow adequate space between the speaker and the surrounding walls or other devices: at least 1' ft. at the sides, 1' ft. behind and 1' ft. above. Inadequate ventilation can result in overheating, possibly causing damage to the device(s), or even fire.

Do not use the speaker's handles for suspended installation. Doing so could result in damage or personal injury.

Avoid setting all equalizer controls and faders to their maximum. Depending on the condition of the connected devices, doing so may cause feedback and may damage the speakers.

Do not expose the device to excessive dust or vibrations, or extreme cold or heat (such as in direct sunlight, near a heater, or in a car during the day) to prevent the possibility of panel discoloration or damage to the internal components.

Do not place the device in an unstable position where it might accidentally fall over.

Do not block the vents. This mixer has ventilation holes at the top to prevent the internal temperature from becoming too high. In particular, do not place the device on its side or upside down. Inadequate ventilation can result in overheating, possibly causing damage to the device(s), or even fire.

Do not use the device in the vicinity of a TV, radio, stereo equipment, mobile phone, or other electric devices. Doing so may result in noise, both in the device itself and in the TV or radio next to it.

IMPORTANT

Please record the serial number of this unit in the space below.

Model:Serial
No.:

The serial number is located on the bottom or rear of the unit. Retain this Owner's Manual in a safe place for future reference.

Connections

- Before connecting the device to other devices, turn off the power for all devices. Before turning the power on or off for all devices, set all volume levels to minimum.

For the SPEAKERS jacks, Use only the included speakers and speakers cables. Use of other types of speakers and cables may result in damage to the device(s), or even fire.

Handling Precautions

When turning on the AC power in your audio system, always turn on the device LAST, to avoid speaker damage. When turning the power off, the device should be turned off FIRST for the same reason.

Do not insert your fingers or hands in any gaps or openings on the device (vents, ports, etc.).

Avoid inserting or dropping foreign objects (paper, plastic, metal, etc.) into any gaps or openings on the device (vents, ports, etc.). If this happens, turn off the power immediately and unplug the power cord from the AC outlet. Then have the device inspected by qualified service personnel.

Do not use the device for a long period of time at a high or uncomfortable volume level, since this can cause permanent hearing loss. If you experience any hearing loss or ringing in the ears, consult a physician immediately.

Do not operate the device if the sound is distorting. Prolonged use in this condition could cause overheating and result in fire.

Do not rest your weight on the device or place heavy objects on it, and avoid use excessive force on the buttons, switches or connectors.

Protective Circuit (poly switch)

All full-range loudspeakers are fitted with a self-resetting poly switch that protects the high-frequency driver from damage caused by excessive power. If a loudspeaker cabinet loses high-frequency output, immediately remove power from the unit and wait for two to three minutes. This should be long enough to allow the poly switch to reset. Reapply power and check the performance of the high frequency driver before continuing, with the power reduced to a level that does not cause the poly switch to interrupt the signal.

Interference From Cell Phone

Using a cell phone near the speaker system can induce noise. If this occurs, move the cell phone further away from the speaker system. Air blowing out of the bass reflex ports is normal, and often occurs when the speaker is handling program material with heavy bass content.


The manufacturer will not be responsible for damage caused by improper use or modification to the device.

Always turn the power off when the device is not in use. The performance of components with moving contacts, such as switches, volume controls, and connectors, deteriorates over time. Consult qualified service personnel about replacing defective parts.

Dimensions


WP08

 Dimensions: 256.4*245*436.5mm
Net Weight: 9.1KG

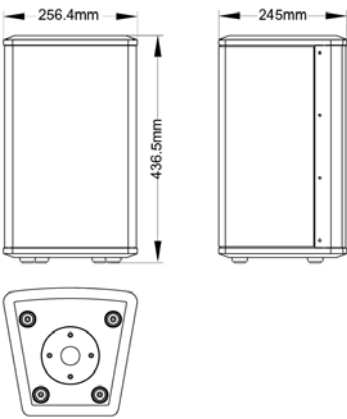


WP10

 Dimensions: 326.4*307*531.5mm
Net Weight: 12.5KG

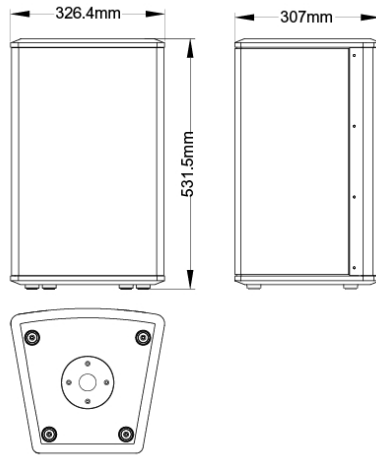


WP12

 Dimensions: 392.8*370*665.1mm
Net Weight: 20.5KG

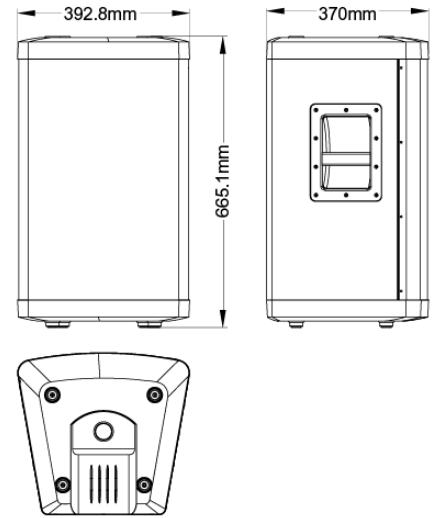


WP15

 Dimensions: 430.8*415.8*779.50mm
Net Weight: 24.5KG

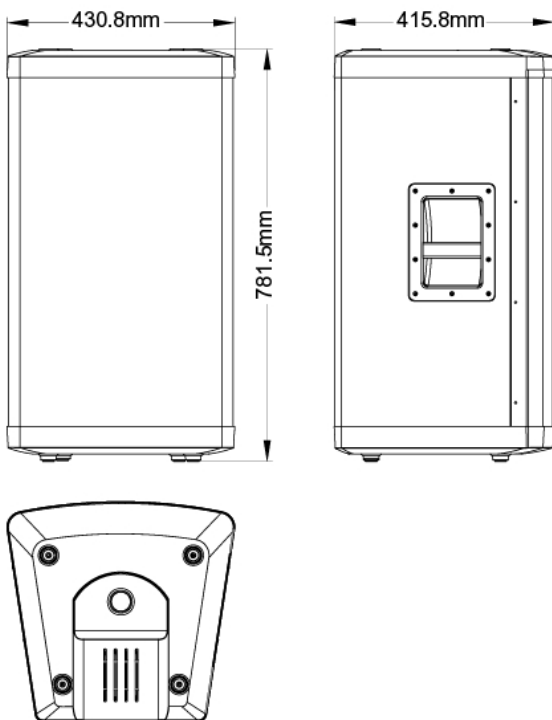

WP215

 Dimensions: 430.8*415.8*1209.5mm
Net Weight: 40KG

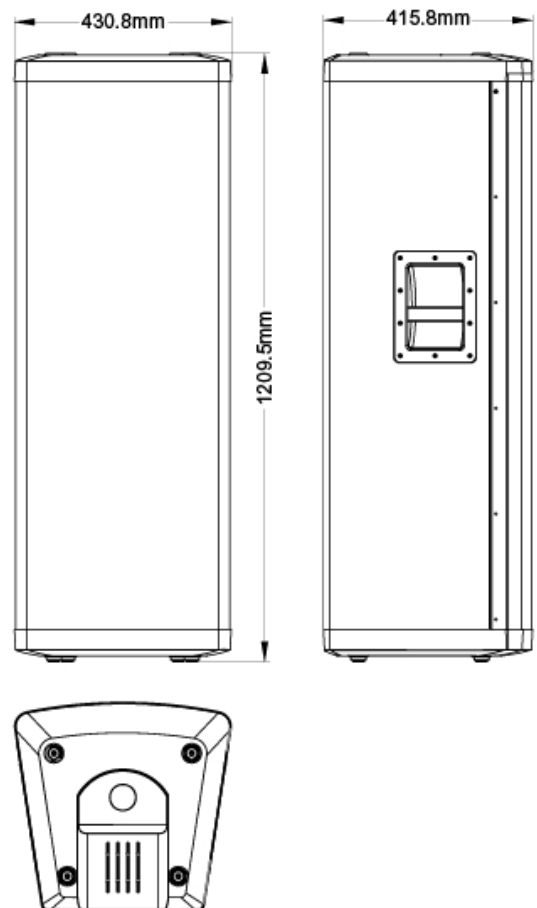

Specifications

	WP08	WP10	WP12	WP15	WP215
Type	8 inch passive	10 inch passive	12 inch passive	15 inch passive	Dual15 inch passive
Frequency response	80-20K Hz	70-20K Hz	50-20K Hz	45-20K Hz	40-20K Hz
Impedance	8 ohm	8 ohm	8 ohm	8 ohm	4 ohm
Sensitivity	93 dB	94 dB	95 dB	96 dB	98 dB
Power handing	150W	150W	250W	250W	350W
Max output SPL	116 dB	116 dB	119 dB	120 dB	123 dB
Driver	1 inch	1 inch	1.35 inch	1.35 inch	1.75 inch
Woofers	8 inch woofer 2"VC	10 inch woofer 2"VC	12 inch woofer 2.5"VC	15inch woofer 2.5"VC	Dual15 inch woofer 2.5"VC
Cabinet	MDF painted cabinet	MDF painted cabinet	MDF painted cabinet	MDF painted cabinet	MDF painted cabinet
Grill	1.2mm steel	1.2mm steel	1.2mm steel	1.2mm steel	1.2mm steel
Connector	Speakon	Speakon	Speakon	Speakon	Speakon
Features	35mm stand pole	35mm stand pole	35mm stand pole	35mm stand pole	35mm stand pole
	1 rear handle	1 rear handle	2 side handle	2 side handle	2 side handle

