




1 A

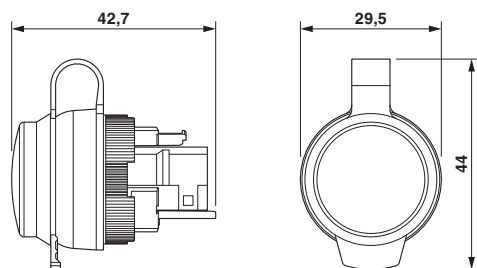


1 B

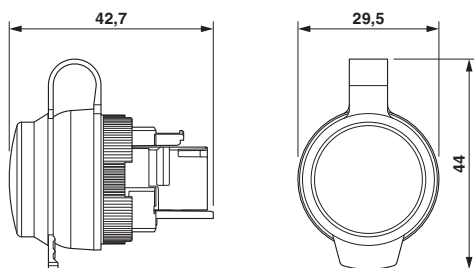


2 A

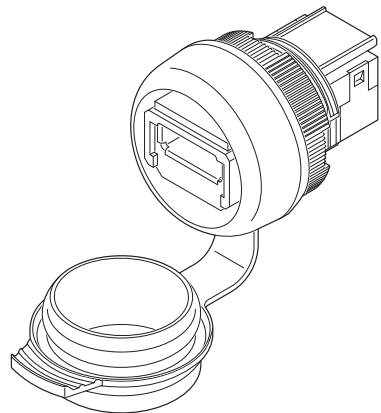


2 B

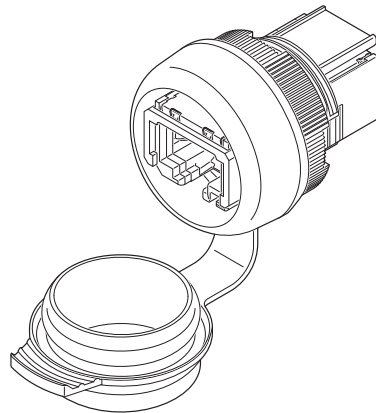

3

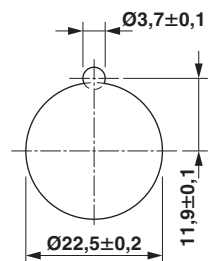

4

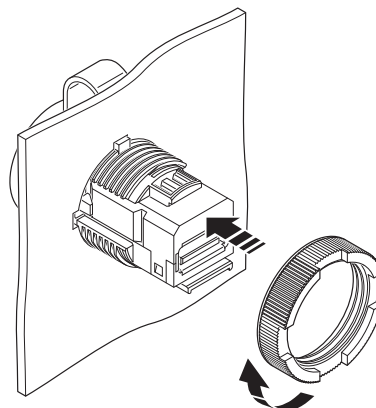

DE Einbauanweisung

EN Installation notes

FR Instructions d'installation

IT Istruzioni di installazione

ES Instrucciones de montaje

PT Instruções de instalação

TR Montaj talimatı

RU Инструкция по установке

PL Instrukcja montażu

ZH 安装说明

SI-RND-U1A

SI-RND-R1A

1425185

1425186

